


DIY



Worthwhile projects you can build on your own

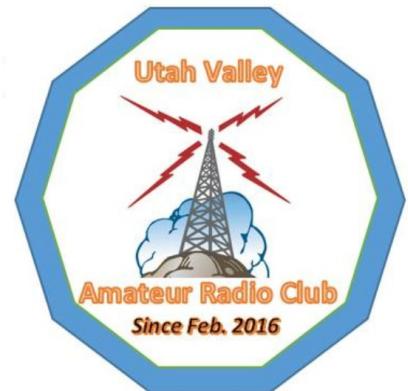

80-10 end-fed half-wave antenna with 49:1 unun

Many hams in the club have asked about this antenna, because it's been such a good performer during Field Day, a Special Event Station, and at the 76ers Picnic. Many were just as amazed by its seeming simplicity and ease-of-installation, and wanted to build one for themselves, especially because it employs only one wire, does not use traps, and does not require a tuner.

This EFHW antenna (patterned after one by Steve Ellington [N4LQ](#), with notes by [K1RF](#)), if built carefully, will serve you for many years, and at up to 200 watts. The heart and engineering of its design is in its 49:1 impedance matching transformer, or *unun* (connects an **unbalanced** feed line to an **unbalanced** radiating element,) where much of this DIY is focused.

The 132-foot half-wave radiating element presents about an 1800 ohm (at 10 meters) to 5000 ohm (at 80 meters) impedance to an end-fed feed point. The unun, therefore, matches it down between $1800 \div 49 = 37$ ohms and $5000 \div 49 = 102$ ohms. At worst case, $102 \text{ ohms} \div 50 \text{ ohms} = 2.04:1$ SWR, well within tuner range; and in fact, should be very good without a tuner.

Parts list


- One [4.5" x 3.5" x 2.7" enclosure](#)
- Two [toroidal FT240-43 ferrite cores](#)
- Two [220 pF 15 kV ceramic capacitors](#)
- One [SO-239 solder bulkhead](#)
- One [1" #8-32 zinc-plated machine screw](#)
- One #8-32 wing nut
- One #8 flat washer
- One #8 split washer
- Four 1" pieces of $\frac{1}{4}$ " heat shrink tubing
- One dogbone insulator

- 140 feet [18 AWG wire](#)
- 6 feet [14 AWG enameled magnet wire](#)
- One [3/4" PVC slip coupling](#)
- Four M3-0.5 mm x 14 mm machine screws
- Four M3-0.5 mm hex nuts
- Four M3 split washers
- One #4 x 18 AWG ring terminal
- Two [#8 x 18 AWG ring terminals](#)
- One 2" x 3" [fiberglass screen](#)
- Super Glue™

Construction

Permanently glue together the two toroids into a single toroid. *Do NOT place tape or any other covering over the toroids.* Cut the magnet wire into one 13-inch wire and one 51-inch wire. Lay the two wires together in parallel, with one of the ends even with the other. While pinching about an inch

of the wires in a vise, pull-twist the two wires about 90 degrees from each other *tightly* into an 8-inch-long helix.

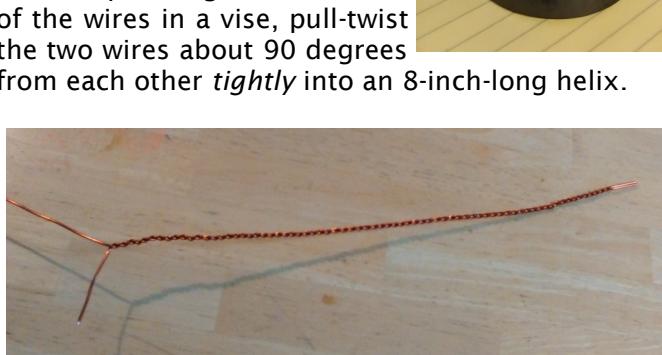




DIY, continued

80-10 end-fed half-wave antenna



This is known as a *bifilar* ("two-filament") pair. Place the junction of the long and short wires on the side of the toroid, and wrap two turns of the pair over the top and around one toroid arc. Continue wrapping the longer wire around the toroid arc for five more turns.

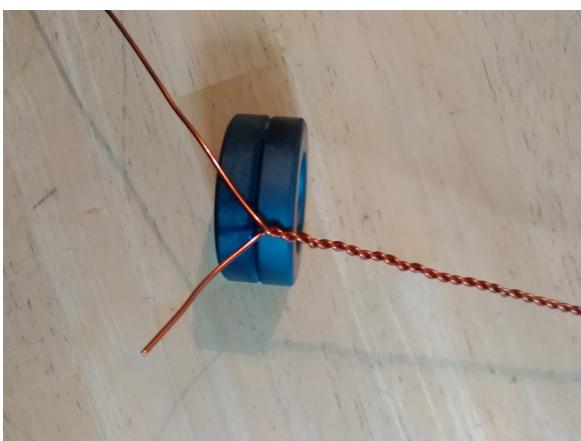

After the fifth turn, thread the wire through the middle again, but continue winding on the opposite side for seven turns.


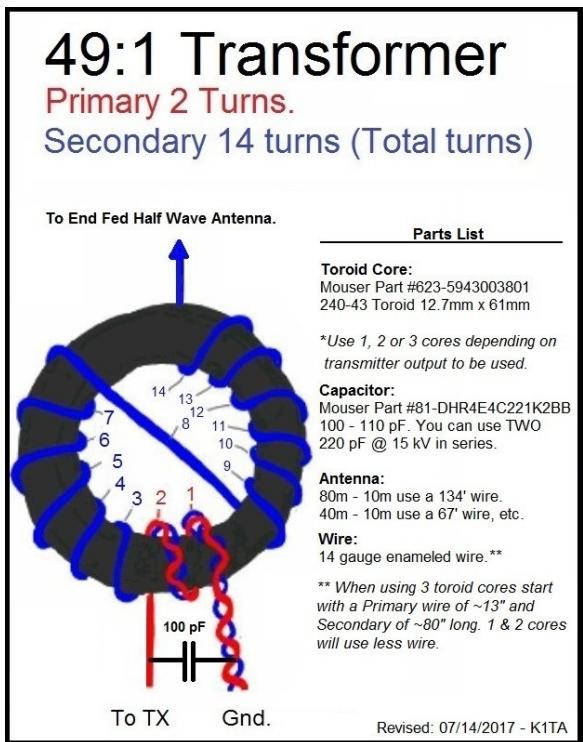


Diagram by K1TA




Our transformer

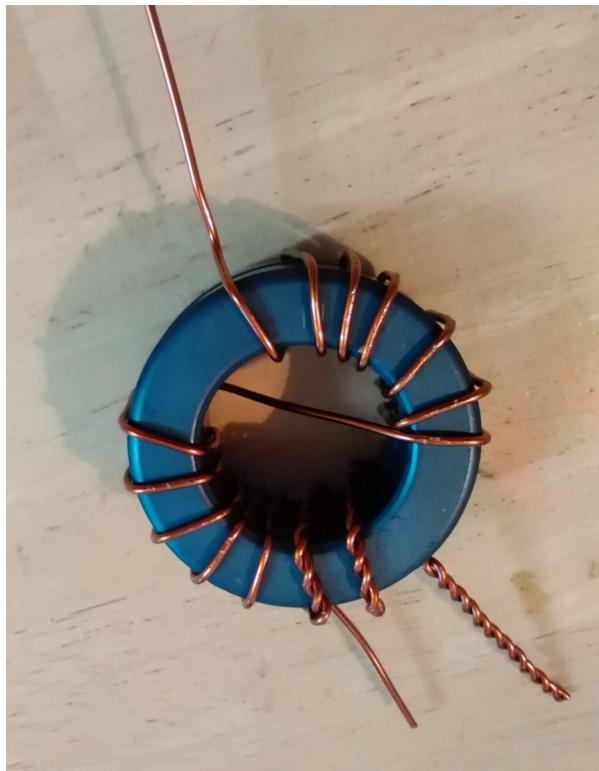


DIY, continued

80-10 end-fed half-wave antenna

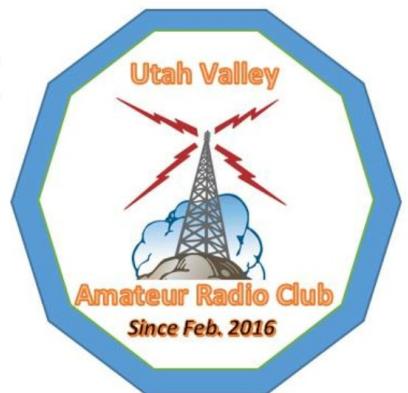

Install the SO-239 bulkhead connector on one end ("bottom") of the enclosure. Drill a 1/8" hole on the side of the enclosure, at the other end, for the antenna wire to exit. I actually drilled a $\frac{1}{4}$ " hole and glued a [crimp sleeve](#) (that brass thing) into it, because I had one lying around. (I also installed them into the flange holes, to protect the wire and support cord from the sharp edges of the enclosure holes.)

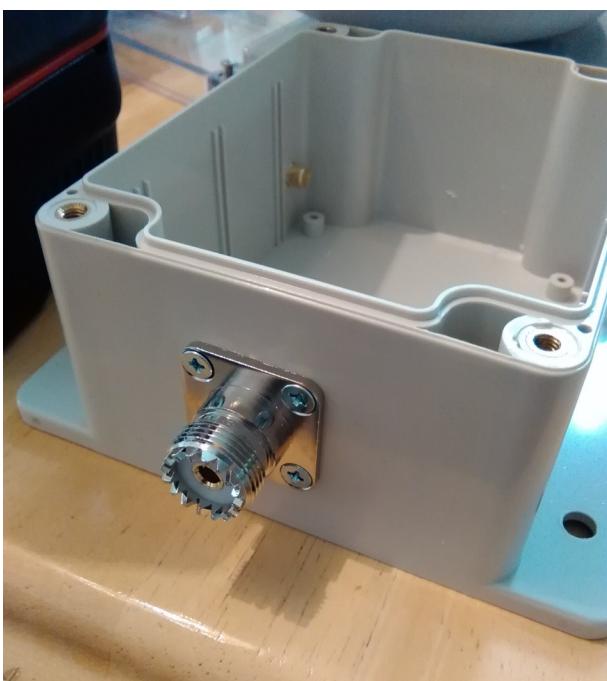


Drill twelve to sixteen $\frac{1}{4}$ " holes in the back of the enclosure, for ventilation. Cover the holes by gluing a piece of fiberglass screen over them on the inside, to prevent insects and debris from entering the enclosure.



Drill two 1/8" holes in the small PVC coupling, centered and $\frac{1}{2}$ " apart. Drill two more, but not in line with the first two, and about halfway toward the outside edge.



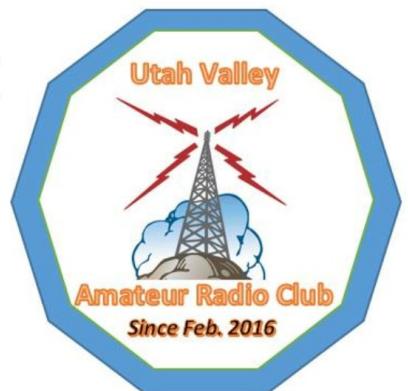

DIY, continued

80-10 end-fed half-wave antenna




Thread eleven feet of the 140-foot wire through the two holes on one end, wind six turns of the wire *tightly* around the PVC, then thread it through the other two holes. This is known as the *compensation coil*. Once the winding is tight, make sure there is at least eight feet of wire between the compensation coil and the end.



Cut the bifilar pair (braided magnet wire) to length, sand them, and solder them together. Solder a short 10 AWG wire to the bifilar pair and to the main (yellow, in this photo) ground lug. Solder a short 18 AWG wire to the bifilar pair and to the ground lug (red, in this photo) of the SO-239 bulkhead connector. Solder the

capacitors in series, then insulate the junction with heat shrink tubing. Solder one of the exposed leads of the capacitor pair to the bifilar pair, and the other exposed lead to the lone magnet wire intended for the SO-239 bulkhead center conductor.

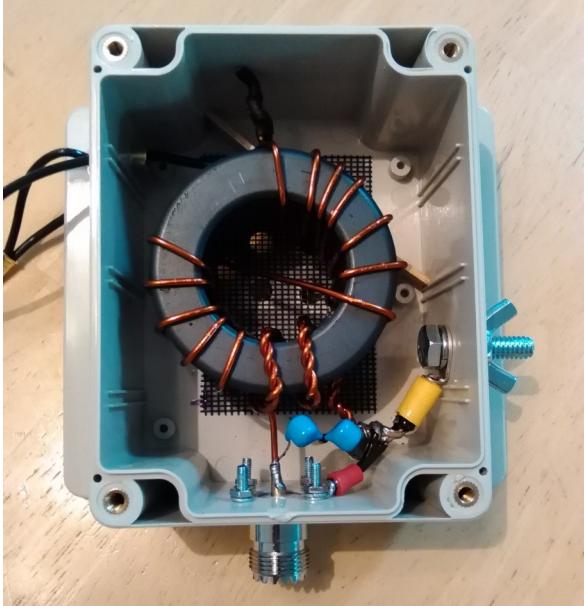

Completed unun

Thread the wire from the compensation coil through an appropriate strain relief (I used a crimp sleeve), through a support hole in the enclosure, and into the enclosure through the exit hole. Measure the length of the wire, such that the distance from the compensation coil to the center of the toroid is about 78 inches.



Strain-relief detail



DIY, continued

80-10 end-fed half-wave antenna





With the enclosure cover

the entire length ended up being about 131 feet.

I strung my antenna about eight feet off the grass in a city park across the street from my house, to test it. Here are some results I got with it. 80 meters was a little less than satisfactory, which was somewhat expected, being so low to the ground. Even the range I typically use,

3.800 MHz to 3.960 MHz, is a bit outside of tuning range at this height. I suspect the compensation coil and capacitors might be causing the antenna to resonate a little too low. It's my hope that a final test, raised up by a mast, will improve the SWR bandwidth on 80.

On the other hand, measurements on 40 meters and 20 meters could not have turned out better, all across both bands. No tuner needed there.

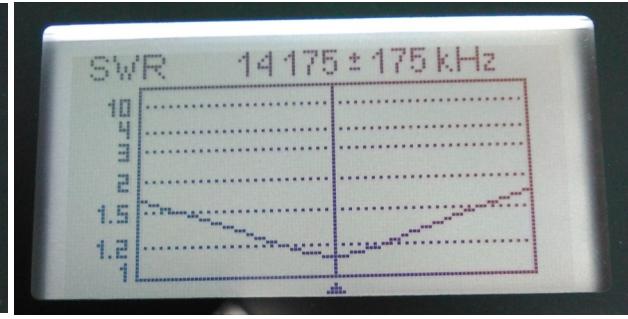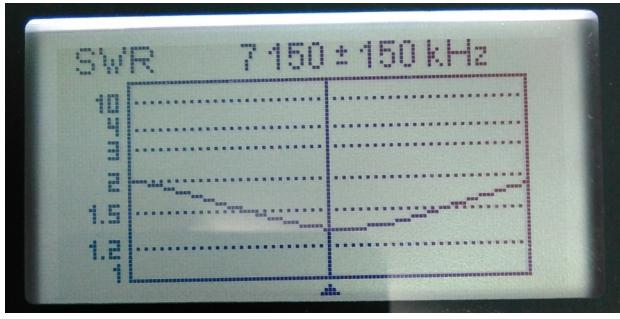





DIY, continued

80-10 end-fed half-wave antenna



10 meters on the analyzer looked a little weird (typically, 10 meters appears almost flat), possibly because of the compensation coil, which is in place primarily for 80 meters. Then again, when I narrowed the display to the 10-meter Technician portion of the band, plus and minus 300 kHz (28.000 MHz through 28.800 MHz, which is where I normally operate), the graph looked a little better.

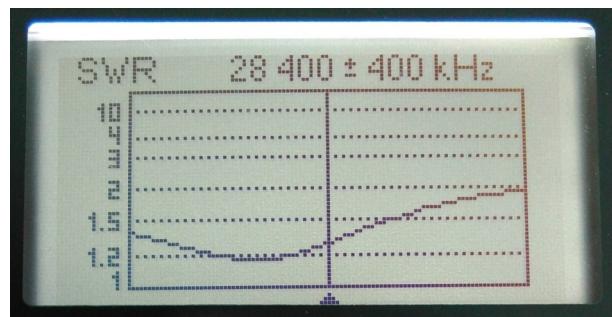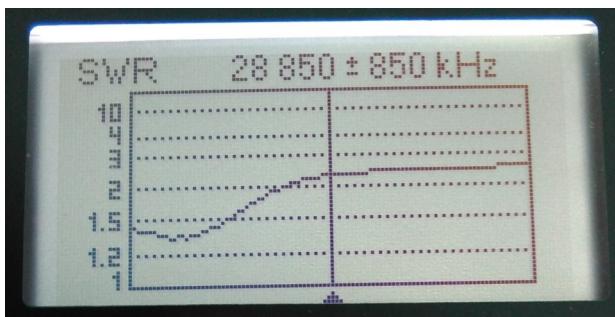

Conclusion

An 80-10 end-fed half-wave antenna can be a very good performing part of an HF station. But its performance depends heavily on a well-designed and carefully constructed 49:1 unun, which matches the long wire impedance to within tuning range of operation. But the performance of an end-fed antenna is also very dependent on height above ground. At both Field Day and at the 76ers Barbecue, I mounted my end-fed 40 feet up, and keeping the wire at least ten feet away from the nearest metallic objects contributed to receiving so many good signal reports, as well as being able to hear many others. Due to the anomalies introduced by the compensation coil, I believe I would leave that out, if I ever construct this antenna again.

Noji Ratzlaff, KNØJI (kn0ji@arrl.net)



The finished product, ready for operation, field and otherwise

